




WWW.DAVIDCLARK.COM

**PARTS LIST
MODEL H3331**

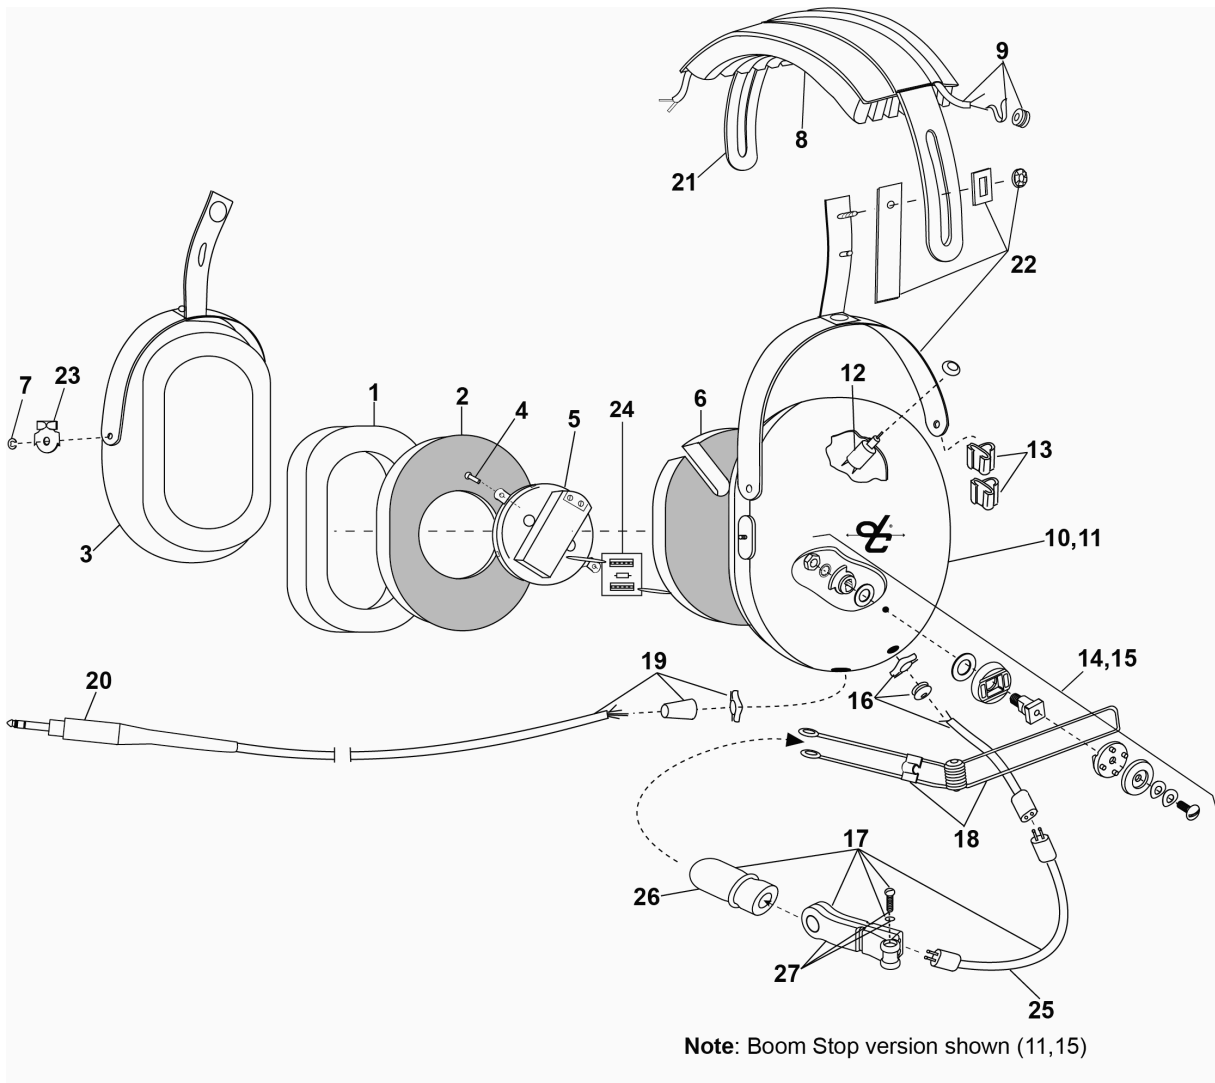

Note: Boom Stop version shown (11, 15)

No.	Description	Part No.
1	Earseal (pair)	18316G-02
2	Dome Filter	25629P-03
3	Right Dome	11696P-12
4	Screws (10/pk)	13180P-03
5	Earphone Assembly	10376G-17
6	Dome Filter	26475P-02
7	Retaining Ring (10/pk)	00009M-03
8	Headband Assembly	12409G-26
9	Overhead Cord Assembly	22607G-01
10	Left Dome (Non-Boom Stop)	11696P-28
11	Left Dome (Boom Stop)	11696P-84
12	Switch, Push-to-Talk	09851P-04
13	Clip, Cord (4/pk)	15125p-02
14	Boom Guide Kit (Non-Boom Stop)	12840G-01

No.	Description	Part No.
15	Boom Guide Kit (Boom Stop)	12840G-20
16	Microphone Cord Assy Kit	10405G-05
17	DC-1A Microphone w/Cord	12948G-14
18	Microphone Boom Assy	12765G-04
19	Comm Cord Assy Kit	18028G-30
20	Kit, 1/4" Plug, Commercial, Stereo	41090G-32
21	Headband Spring	25630P-01
22	Stirrup Assembly	22378G-01
23	Dome Stop	15097P-01
24	PCB Assembly	18289G-13
25	Microphone Cord Assembly	10516G-14
26	Mic Protector	40062G-06
27	DC-1A Microphone	18920G-04

ELECTRICAL SCHEMATIC MODEL H3331

